
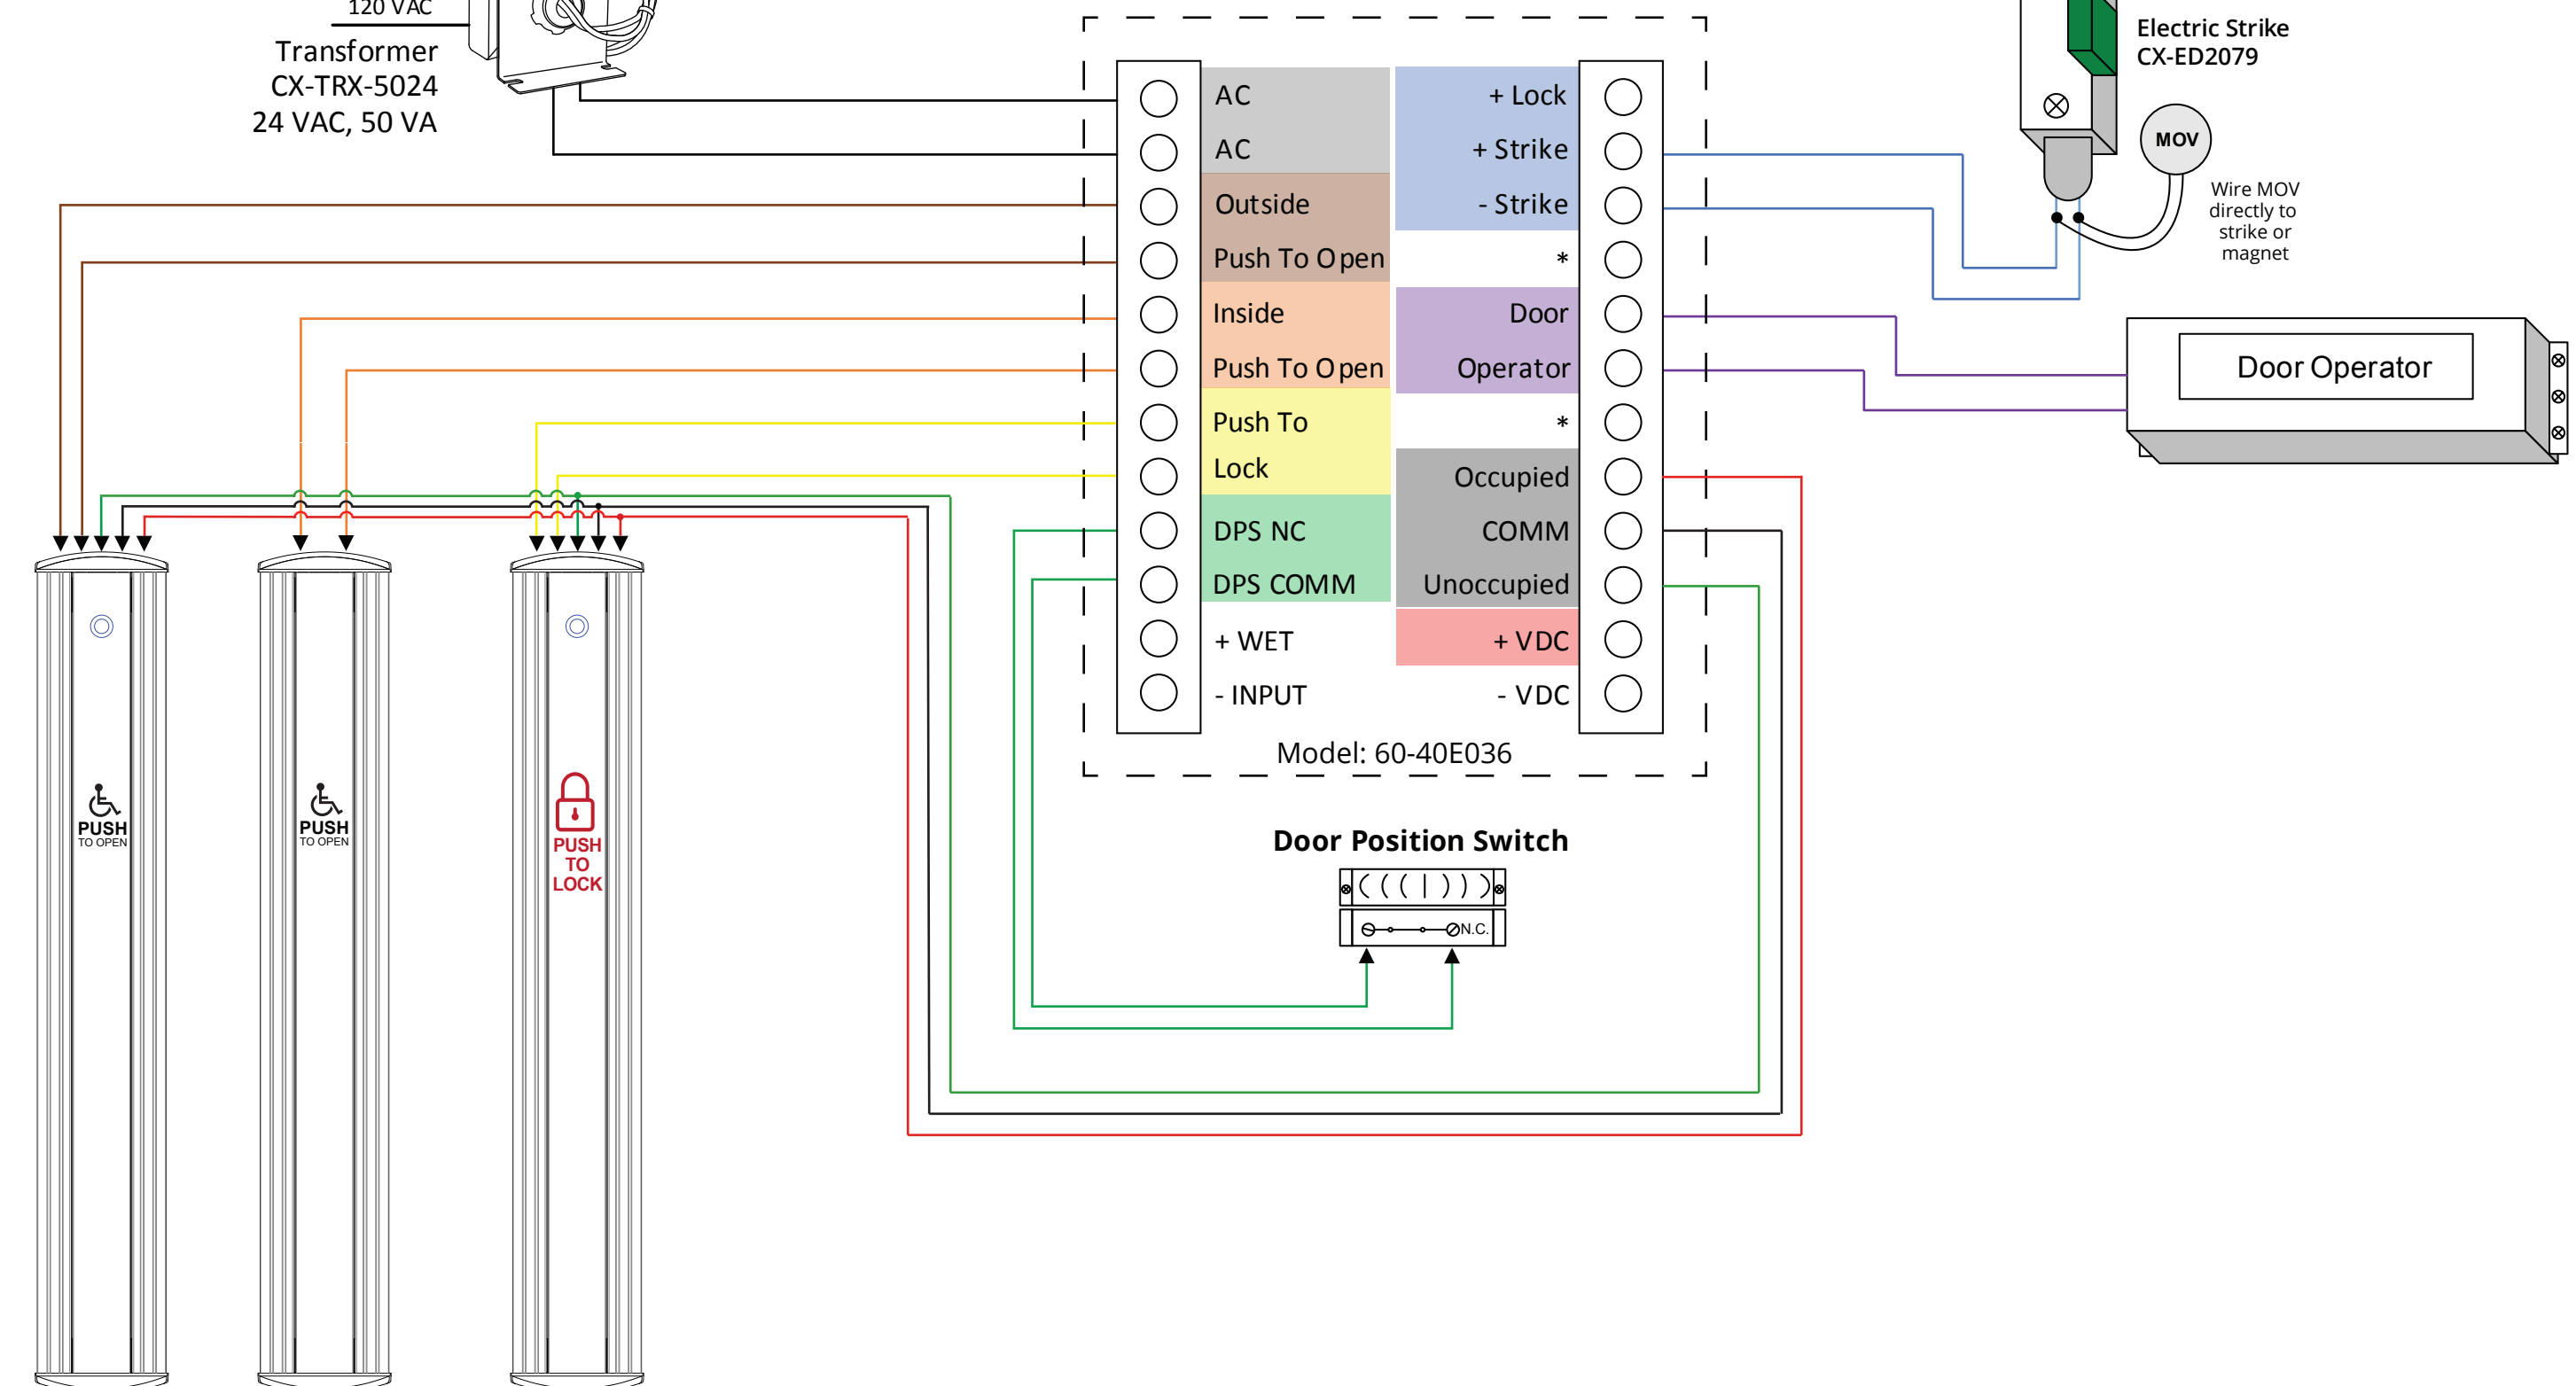


CX-WC17-PS Wiring Diagram

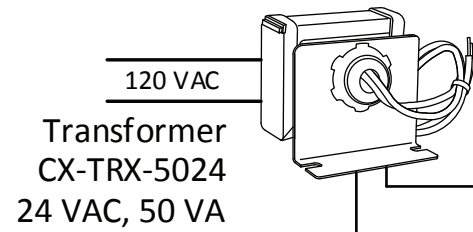

CM-7536/4-LED Outside Push to Open
CM-7536/4 Inside Push to Open
CM-7536/8B-LED Push to Lock

- Notes**
1. CX-33 can be set to Mode 7 (Normally Unlocked) or Mode 8 (Normally Locked).
 2. Mode 7 = Set Set Strike to Fail Safe.
 3. Mode 8 = Set Strike to Fail Secure.

		CAMDEN DOOR CONTROLS		2395 Skymark Ave, Mississauga, ON L4W 4Y6
SCALE: NONE	DRAWN BY: JML (JF)	DATE: Oct. 14, 2025	REV: 0	
CX-WC17-PS Wiring Diagram				
DRAWING No: DRG-WC17-PS-1		FILENAME: CX-WC17-PS-7_Wiring Diagram_R1.ai		