

Electrified Locks, Relays and Timers

CX-92S 600lb. & 1200lb.

Magnetic Locks

INSTALLATION INSTRUCTIONS



SECURITY
 UL 1034 / UL 294
 Standard for
 Burglary-Resistant
 Electric Locking
 Mechanisms



ULC S533-15
 Standard for
 Access and Egress


1. SPECIFICATIONS

	CX-92S-06	CX-92S-12
Static Strength	600 lbs. x2 (Factory Tested) ** 500 lbs. x2 (UL Verified)	1200 lbs. x2 (Factory Tested) ** 1000 lbs. x2 (UL Verified)
Dynamic Strength	50 ft-lb	70 ft-lb
Voltage Input	12/24V DC	12/24V DC
Current Draw	480mA/240mA x 2	420mA/210mA x 2
Dimensions (Body)	19-3/4"W x 2"H x 1-1/8"D (500mm x 50mm x 29mm)	21"W x 2-5/8"H x 1-9/16"D (532mm x 67mm x 39mm)
Dimensions (Armature Plate)	2 x 7-5/32"W x 1-3/4"H x 15/32"D 2 x (182mm x 44mm x 12mm)	2 x 7-9/32"W x 2-13/32"H x 5/8"D 2 x (185mm x 61mm x 16.5mm)
Endurance	250,000	250,000

Performance Levels

- Destructive Attack = Level I
- Line Security = Level I
- Standby Power = Level I
- Endurance = Level IV

2. BASIC INSTALLATION CONCEPT & ACCESSORIES (FIGURE 1)

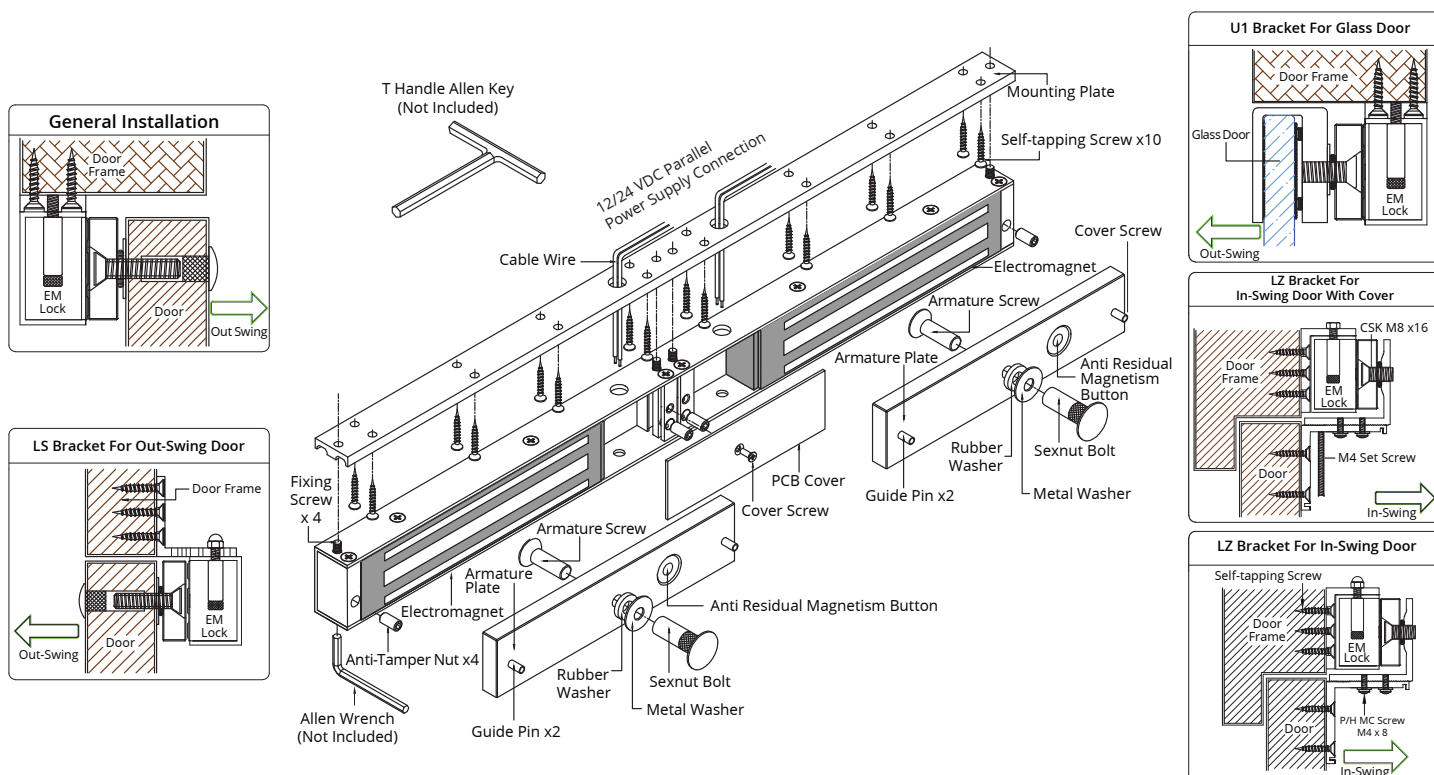

CX-92S 600lb. & 1200lb. Magnetic Locks

INSTALLATION INSTRUCTIONS

3. INSTALLATION

1. Drill the armature plate holes in the door using the sticker template provided.
2. Attach the armature plate to the door with the hardware provided as per Figure 2.3.
3. With the door closed, mark the door frame at the edge of the armature in order to properly align the electromagnet to the armature.
4. Attach the mounting plate to the door frame using the self-tapping screws provided.

Align the mounting plate with the mark from Step 3.

5. Insert the wires through the hole in the mounting plate and into the electromagnet unit. Attach the electromagnet unit to the mounting plate with the Allen head fixing screw.
6. Screw in the anti-tamper nuts to prevent unauthorized access and make sure to fully tighten the fixing screw with proper tool. A "T" Handle Allen Key.

7. The electromagnetic lock must be installed in accordance with the following :

- Life Safety Code ANSI / NFPA 101.
 - Local Authority having Jurisdiction.
 - Manufacturer's installation instructions provided with each unit.
 - The power supply units must be mounted inside the secured or protected area.
8. Connect the magnet contact wire to the door monitoring system; according to the system guides.
 9. Typical wiring method shall be in accordance with CSA C22.1, Canadian Electrical Code, Part I, Safety Standard for Electrical Installations, Section 32.

Note:

Install in indoor dry location.

Use caution when changing factory default setting.

It is recommended to apply a light coat of silicon lubricant to the mating surface on a monthly basis to prevent rust.

NOTICE:

All models are recognized to:
UL 294 and ULC S533-15 : Standard for Access & Egress.

Models CX-91S-06 & CX-91S-12 are listed to:
UL 1034, Standard for Burglary-Resistant Electric Locking Mechanism.

UL 294, Access Control System Units


** Value not verified by UL.

Remark:

All drawings shown are for illustration purpose only.
Actual product may vary due to product enhancement.

4. TROUBLE SHOOTING

1. Door not locked:
 - Incorrect wiring or no power from power supply .
2. Reduced holding force:
 - Poor contact of electromagnet and armature
 - Be sure armature is loose enough that it can fully contact electromagnet along the entire length
 - Mating surface is dusty or damaged
 - Improper input voltage or wire size.

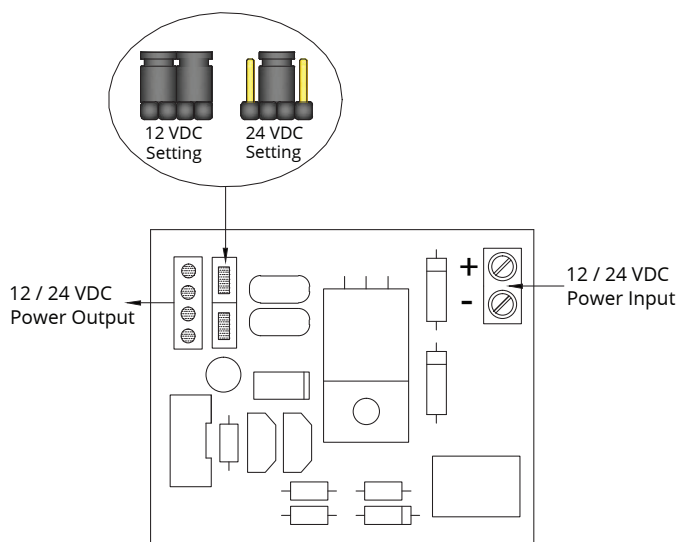

IMPORTANT!

Set the jumper position according to the power input before switching ON the power.

Serrures électriques, relais et minuteriers

CX-92S 600lb. & 1200lb.

Serrures magnétiques de porte

INSTRUCTIONS D'INSTALLATION




SECURITY
UL LISTED
 UL 1034 / UL 294
 Standard for
 Burglary-Resistant
 Electric Locking
 Mechanisms

RA
 ULC S533-15
 Standard for
 Access and Egress

1. PARAMÈTRES TECHNIQUES

	CX-92S-06	CX-92S-12	Niveaux de rendement
Résistance Statique	600 lbs. x2 (Factory Tested) ** 500 lbs. x2 (UL Verified)	1200 lbs. x2 (Factory Tested) ** 1000 lbs. x2 (UL Verified)	- Attaque destructrice = niveau I
Force Dynamique	50 ft-lb	70 ft-lb	- Sécurité de lignes = niveau I
Tension	12/24 V C.C.	12/24 V C.C.	- Alimentation de secours = niveau I
Appel de courant	480mA/240mA x 2	420mA/210mA x 2	- Endurance = niveau IV
Dimensions (Corps)	19-3/4 po W x 2 po H x 1-1/8 po D (500 mm x 50 mm x 29 mm)	21 po W x 2-5/8 po H x 1-9/16 po D (532 mm x 67 mm x 39 mm)	
Dimensions (Plaque d'armature)	2 x 7-5/32 po W x 1-3/4 po H x 15/32 po D 2 x (182mm x 44mm x 12mm)	2 x 7-9/32" W x 2-13/32" H x 5/8" D 2 x (185mm x 61mm x 16.5mm)	
Endurance	250 000	250 000	

2. CONCEPT D'INSTALLATION DE BASE ET ACCESSOIRES (FIGURE 1)

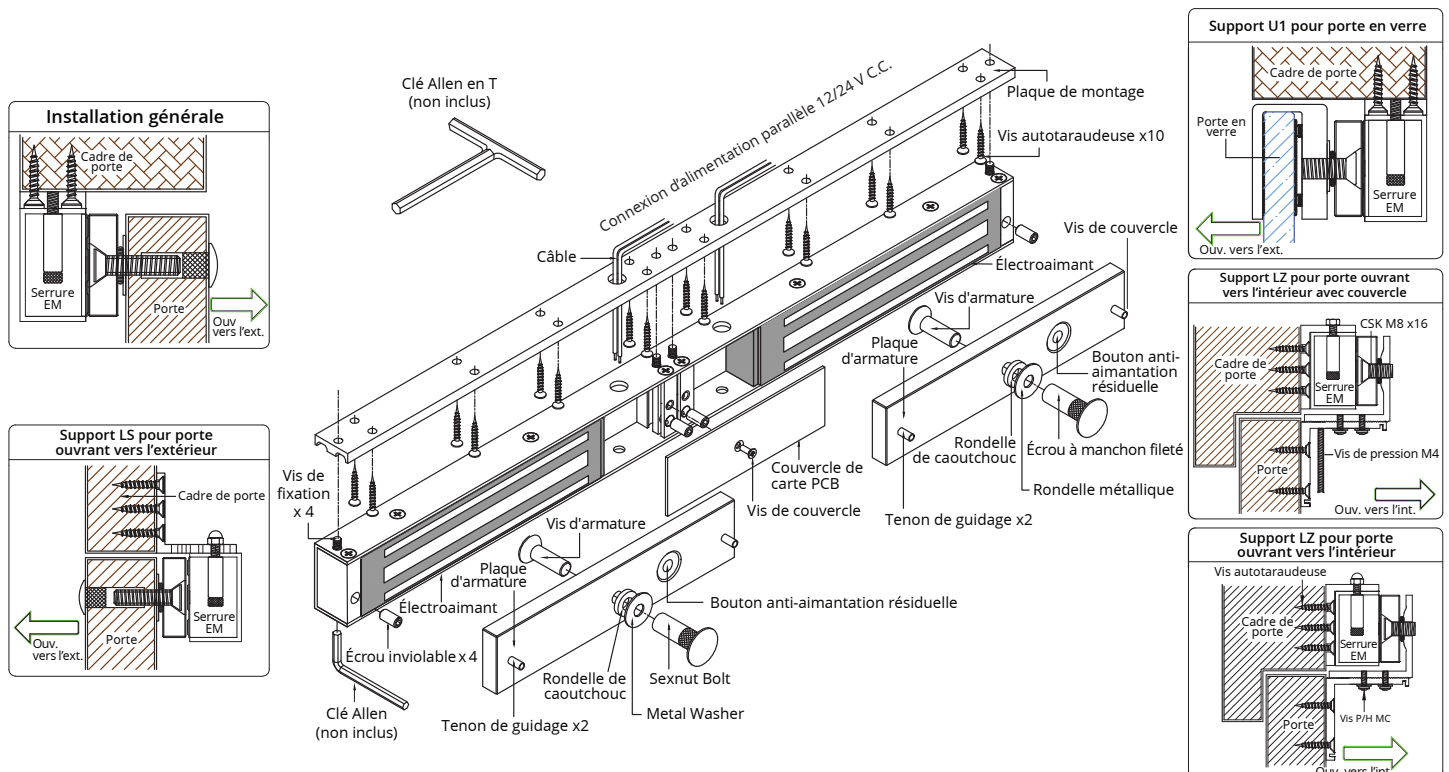

3. INSTALLATION

1. Percer les trous de la plaque d'armature dans la porte à l'aide du gabarit autocollant fourni.
2. Fixer la plaque d'armature à la porte avec la quincaillerie fournie selon la figure 2.3.
3. Avec la porte fermée, marquer le cadre de porte à l'extrémité de l'armature afin de bien aligner l'électroaimant à l'armature.
4. Fixer la plaque de montage au cadre de porte avec les vis autotaraudeuses fournies.
Aligner la plaque de montage de l'étape 3.
5. Insérer les câbles dans le trou de la plaque de montage et dans l'unité de l'électroaimant. Fixer l'unité de l'électroaimant à la plaque de montage avec la vis la plaque de montage avec le vis Allen.
6. Visser les écrous inviolables afin d'empêcher l'accès non autorisé et s'assurer de bien serrer la vis de fixation avec la clé Allen en T appropriée.
7. Les électroaimants installés doivent suivre:
 - Code de sécurité ANSI / INFA 101
 - La juridiction qui a l'autorité locale.
 - Le guide d'installation du fabricant qui est fourni avec chaque unité.
 - Tout le câblage devant être branché dans la zone protégée.
8. Connectez le fil de contact magnétique au système de surveillance de la porte; selon les guides du système.
9. Le système de câblage devrait suivre les règlements de CSA C22.1 les codes électriques Canadian section 1, les standards de sûreté pour les installations électriques, section 32.

Remarque:

Installez à l'intérieur dans une location sèche.

Usez de prudence si vous changez les paramètres initiaux du fabricant.

Il est recommandé d'appliquer mensuellement une fine couche de lubrifiant à base de silicone sur la surface de contact afin de prévenir la formation de rouille.

NOTIFICATION :

Tous les modèles sont reconnus :
UL 294 et ULC 5533-15: La norme pour l'accès et sortie.

Modèles CX-91S-06 et CX-91S-12 sont inscrits
UL 1034, la norme pour anti-effraction électrique

Mécanisme de verrouillage.

UL 294, Système de contrôle d'accès

** la valeur n'est pas vérifiée par UL.

Notez :

Tous les dessins sont utilisés uniquement pour illustrer.


Le produit réel peut varier en raison de l'amélioration du produit.

4. DÉPANNAGE

1. La porte ne verrouille pas:
 - Mauvais branchement ou alimentation coupée de la source.

La force de retenue est réduite:

- Mauvais contact de l'électroaimant et de l'armature
- S'assurer que l'armature soit suffisamment libre pour entrer complètement en contact avec l'électroaimant sur toute la longueur
- La surface de contact est poussiéreuse ou abîmée
- Mauvaise tension d'alimentation ou grosseur de câble.

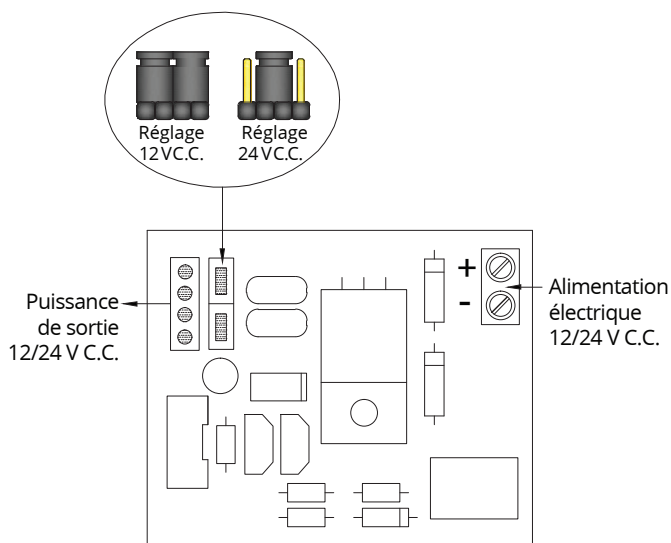**IMPORTANT!**

Bien régler la position du cavalier selon l'alimentation électrique avant d'activer l'interrupteur.